


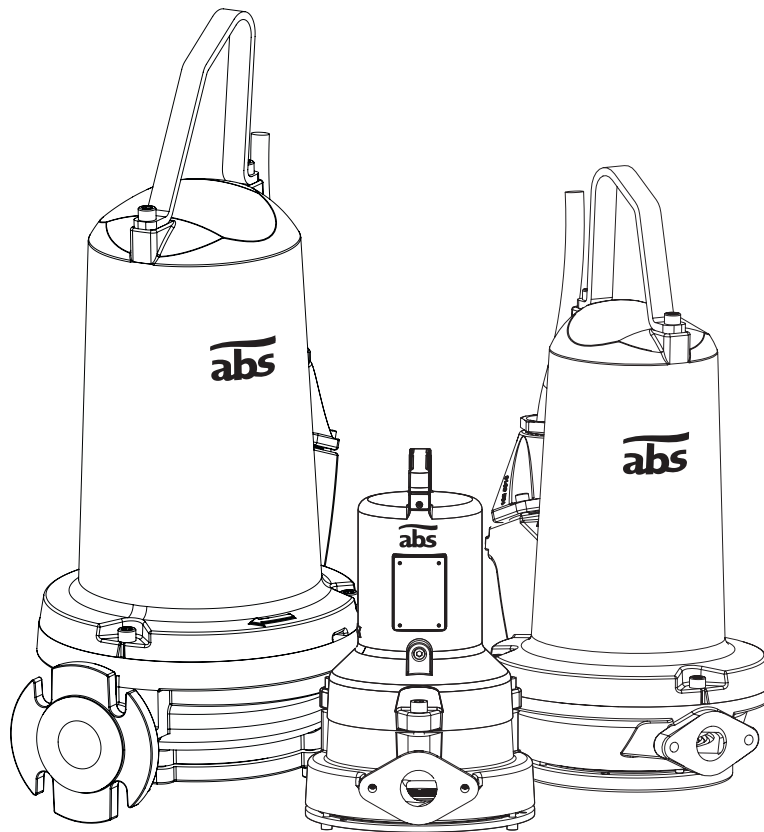

ABS Piranha submersible grinder pump S10 - PE125



ABS Piranha submersible grinder pump

S10/4W-50	S10/4W-50 Ex	PE30/2C-50 Ex	S10/4-60	S10/4-60 Ex	PE25/2W-C-60 Ex	PE80/2-E-60 Ex
S12/2-50	S12/2-50 Ex	PE 55/2E-50 Ex	S10/4W-60	S10/4W-60 Ex	PE28/2-C-60 Ex	PE100/2-E-60 Ex
S12/2W-50	S12/2W-50 Ex	PE70/2E-50 Ex	S20/2-60	S20/2-60 Ex	PE35/2-C-60 Ex	PE110/2-E-60 Ex
S13/4-50	S13/4-50 Ex	PE90/2E-50 Ex	S20/2W-60	S20/2W-60 Ex	PE35/2W-C-60 Ex	PE125/2-E-60 Ex
S17/2-50	S17/2-50 Ex	PE110/2E-50 Ex	S26/2W-60	S26/2W-60 Ex	PE45/2-C-60 Ex	
S17/2W-50	S17/2W-50 Ex		S30/2-60	S30/2-60 Ex	PE45/2W-C-60 Ex	
S21/2-50	S21/2-50 Ex					
S26/2-50	S26/2-50 Ex					

Contents

1	Application areas	3
1.1	Explosion-proof approval.....	3
2	Safety	3
2.1	Use of explosion-proof pumps in explosive zones	3
2.2	Special conditions for safe use of S-type, explosion-proof motors.....	3
3	Technical data	4
3.1	Nameplate	4
4	General design features	5
4.1	Design features Piranha-S	5
4.2	Design features Piranha-PE.....	6
5	Transport and Storage	7
5.1	Transport	7
5.2	Storage	7
5.2.1	Moisture protection of motor connection cable	7
6	Mounting and installation	8
6.1	Installation example in concrete sump	8
6.2	Discharge Line.....	8
7	Electrical Connection	9
7.1	Temperature monitoring	9
7.2	Seal monitoring.....	9
7.3	Wiring diagrams.....	10
7.4	Checking direction of rotation.....	11
7.5	Changing direction of rotation	11
8	Commissioning	12
9	Maintenance	12
9.1	General maintenance hints.....	12
9.2	Shredding system.....	13
9.3	Oil filling and oil changing.....	13
9.4	Oil-fill quantities	13
9.5	Bearings and Mechanical Seals.....	14
9.6	Maintenance of Lifting Stations in accordance with EN 12056.....	14
9.7	Cleaning.....	14
9.8	Venting of the volute	14
10	Troubleshooting Guide	15
	EC Declaration of Conformity	16

Symbols and notices used in this booklet:



Presence of dangerous voltage.



Non-compliance may result in personal injury.



Danger of an explosion occurring.

ATTENTION! Non-observance may result in damage to the unit or negatively affect its performance.

NOTE: Important information for particular attention.

1 Application areas

Piranha submersible grinder pumps have been designed for the pumping of sewage containing faecal matter from buildings and sites where the location is below the sewer level.

In addition Piranha pumps are ideal for effective and economical pressurised dewatering using pipes of small cross-sectional area, in private, municipal, and industrial applications.

The regulations of DIN EN 12056-4 as well as other local codes should be observed.

ATTENTION *The maximum allowable temperature of the medium pumped is 40 °C*

1.1 Explosion-proof approval

The motors of the Piranha series have explosion-proof certification in accordance with Ex d II BT4 and ATEX 94/9C.

2 Safety

The general and specific Health and Safety requirements are described in detail in the **Safety Instructions for ABS Products** booklet. If anything is not clear or you have any questions as to safety make certain to contact the manufacturer ABS.

2.1 Use of explosion-proof pumps in explosive zones.

1. Explosion-proof submersible pumps may only be operated with the thermal sensing system connected.
2. If ball type float switches are used, these must be connected to an intrinsically safe electrical circuit "Protection type EX (i)" in accordance with VDE 0165.
3. Dismantling and repair of submersible explosion-proof motors may only be carried out by approved personnel in specially approved work shops.

2.2 Special conditions for safe use of S-type, explosion-proof motors.

1. The integral supply cable shall be suitably protected from mechanical damage and terminated within an appropriate termination facility.
2. Pump motors rated for use with 50/60 Hz sinusoidal supplies shall have the thermal protection devices connected in such a way that the machine is isolated from the supply in the event of the stator reaching 130 °C.
3. Pump motors rated for use with variable frequency or non-sinusoidal supplies shall have the thermal protection devices connected in such a way that the machine is isolated from the supply in the event of the stator reaching 100 °C for T4 classified machines, or 160 °C for T3 classified machines.
4. These motor units are not intended for user service or repair, any operation that may affect the explosion protection characteristics should be referred to the manufacturer. The maximum permitted flamepath gaps are tighter than those specified in EN 50018.



3 Technical data

Maximum noise level ≤ 70dB. This may be exceeded in certain circumstances.

Detailed technical information is available in the technical data sheet ABS Piranha submersible grinder pump 08 - 125 which can be downloaded from www.absgroup.com > Downloads.

3.1 Nameplate

We recommend that you record the data from the nameplate on the pump in the corresponding form below, and maintain it as a source of reference for the ordering of spare parts, repeat orders and general queries.

Always state the pump type, item no. and serial no. in all communications.

Piranha-PE pumps are rated for use in hazardous locations (Ex) as standard, and are fitted with a standard nameplate containing technical data and a secondary nameplate to certify that the pump is Ex rated (examples below).

If a Piranha-PE pump is serviced or repaired in a workshop that is not Ex approved then it must no longer be used in hazardous locations and the Ex nameplate must be removed.

Legend

Typ	Pump type
Nr	Item No.
Sn	Serial No.
xx/xxxx	Production date (Week/Year)
U_N	Rated voltage V
I_N	Rated current A
Ph	Number of phases
Hz	Frequency Hz
P1	Rated input power kW
P2	Rated output power kW

1/min	Speed	r/min
$\cos \varphi$	Power factor	pf
NEMA	NEMA code	
Q_{max}	Max. Flow	m ³ /h
Hmax	Max. Head	m
∅ Imp.	Impeller diameter	mm
DN	Discharge diameter	mm

Standard nameplate

		Cardo Production Wexford Ltd. Wexford, Ireland www.cardo.com			
Typ		SN		xx/xxxx	
Nr.					
U_N	V	Ph	I_N	A	Hz
P1N	kW	P2N	kW	n	min ⁻¹
Q_{max}	m ³ /h	Hmax	m	∅Imp.	mm
Cos		Hmin	m	DN	
Insul. Cl.F				DIN EN12050	

Piranha-S

Typ	Sn	xx/xxxx	
Nr			
U_N	I_N	Ph	Hz
P1:	P2:	1/min	
$\cos \varphi$	NEMA		
Q_{max}	Hmax	∅Imp	
DN	Hmin	Weight	
EN 12050-1			

Piranha-PE

Ex nameplate

		Cardo Production Wexford Ltd. Wexford, Ireland www.cardo.com					
Typ		SN		1180		II 2G k EEx d IIB T4	
Nr							
Q_{max}	m ³ /h	Hmax	m	∅Imp	mm		
		Hmin	m	DN			
U_N	V	Ph	I_N	A	Hz	Cos	
P1	kW	P2	kW	n	1/min		
		DIN EN12050		Insul.Cl.F			
				Connection information for the temperature controller is in the installation instructions			
				Anschlußhinweise für die Temperaturwächter in der Montage- u. Betriebsanleitung beachten.			
				Do not open while energised Nicht unter Spannung öffnen.			

Piranha-S

0102	II 2G k Ex d IIB T4	
Do not open while energized Nicht unter Spannung öffnen		


Piranha-PE

4 General design features

Submersible grinder pump fitted with a shredding system hydraulic.


The shredding system is located before the impeller and consists of a shredding rotor in combination with a stationary cutting ring fixed to a spiral bottom plate.

4.1 Design features Piranha-S

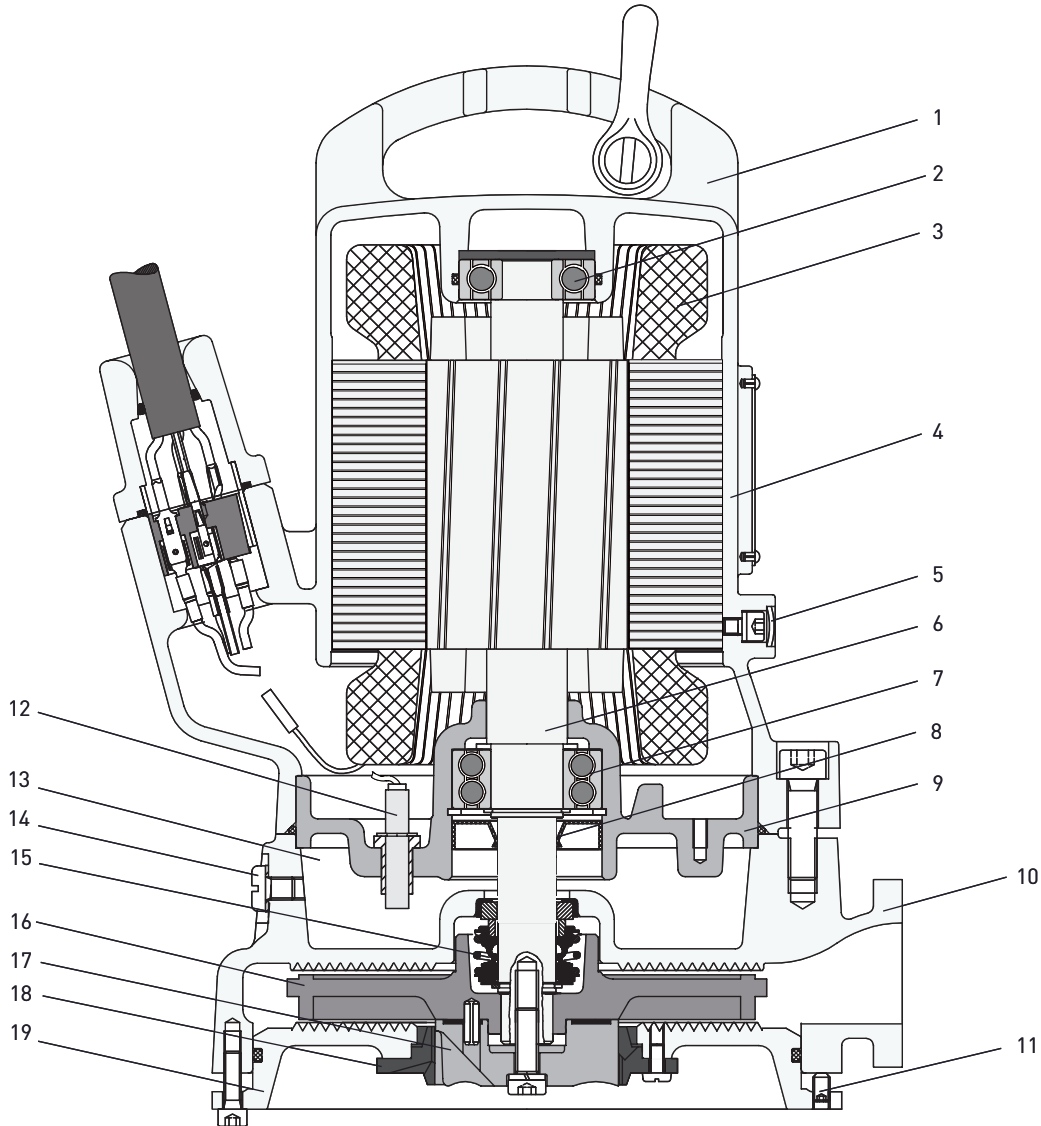


- | | | | |
|----|--|----|--|
| 1 | Cast iron lifting handle and steel shackle | 11 | Bottom plate adjustment screw |
| 2 | Upper bearing - single row | 12 | Moisture sensor (DI) |
| 3 | Motor with thermal sensors | 13 | Oil chamber |
| 4 | Motor housing | 14 | Oil chamber drain plug/pressure test point |
| 5 | Motor chamber pressure test point | 15 | Mechanical seal |
| 6 | Stainless steel shaft | 16 | Impeller |
| 7 | Lower bearing - double row | 17 | Shredding rotor |
| 8 | Oil-lubricated lip seal | 18 | Cutting ring (fixed to bottom plate) |
| 9 | Bearing housing | 19 | Bottom plate |
| 10 | Volute | | |

Shredding system

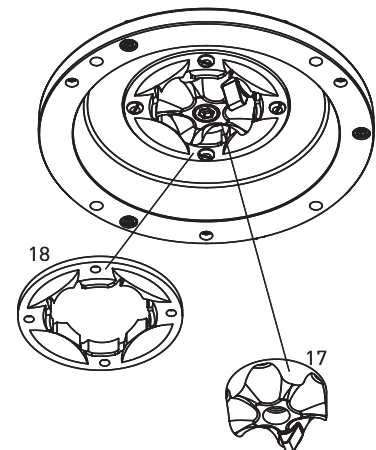

4.2 Design features Piranha-PE

Submersible grinder pump fitted with a shredding system hydraulic and a Premium Efficiency motor.

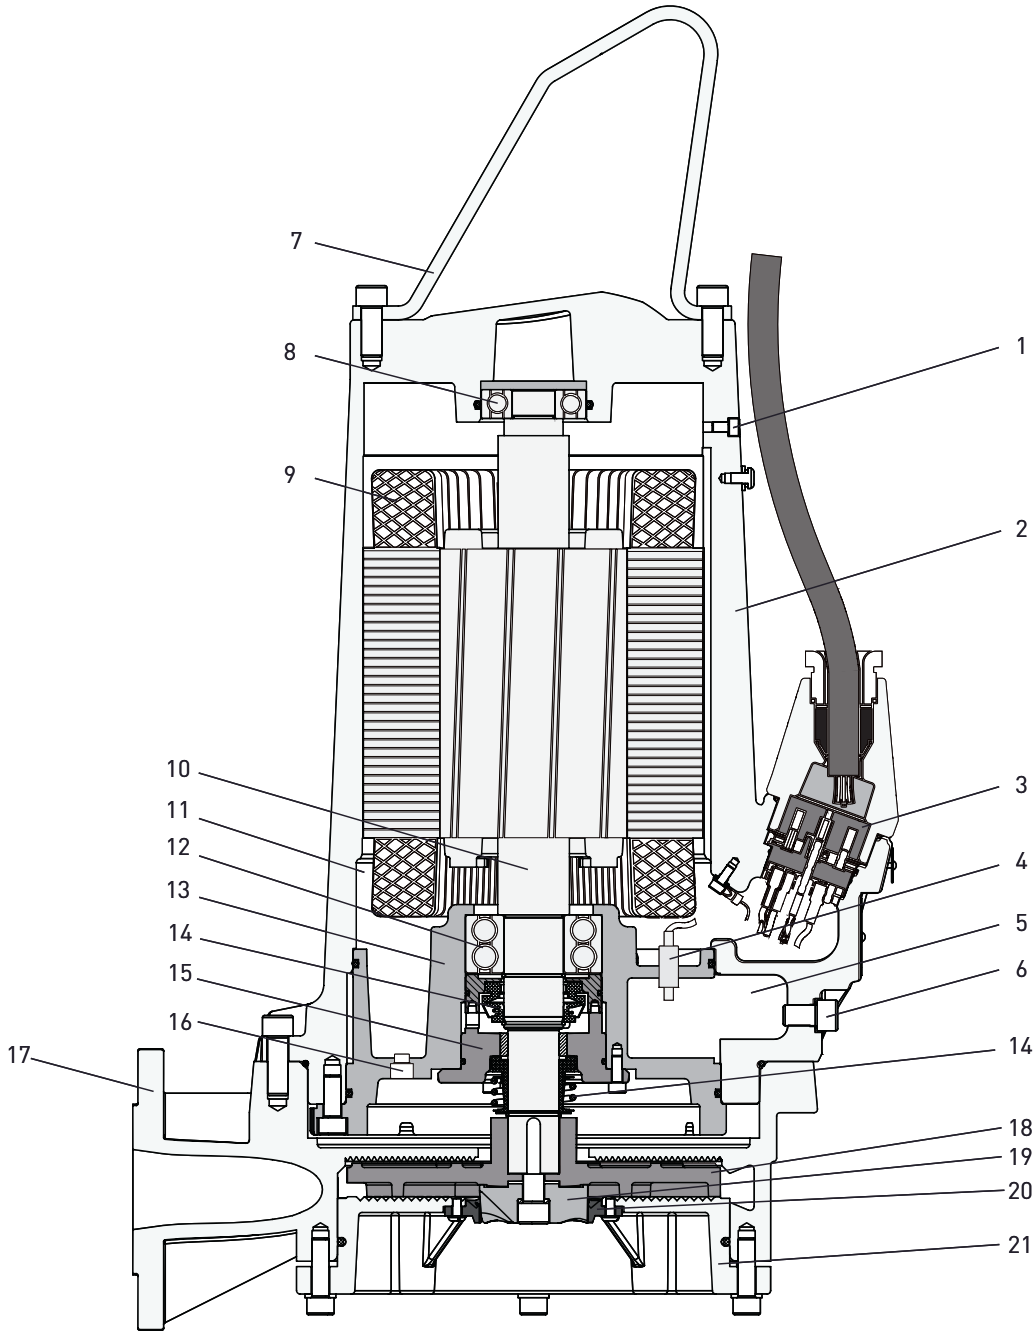

- | | | | | | |
|---|---|----|----------------------------|----|---|
| 1 | Pressure release screw | 8 | Upper bearing - single row | 16 | Motor chamber drain plug/ pressure test point |
| 2 | Motor housing | 9 | Motor with thermal sensors | 17 | Volute |
| 3 | 10-pole terminal block | 10 | Stainless steel shaft | 18 | Impeller |
| 4 | Moisture sensor (Di) | 11 | Motor chamber | 19 | Shredding rotor |
| 5 | Oil chamber | 12 | Lower bearing - double row | 20 | Cutting ring (fixed to bottom plate) |
| 6 | Oil chamber drain plug/ pressure test point | 13 | Bearing housing | 21 | Bottom plate |
| 7 | Stainless steel lifting hoop | 14 | Mechanical seals | | |
| | | 15 | Seal holding plate | | |

5 Transport and Storage

5.1 Transport

During transport, care should be taken that the pump is not dropped or thrown.

The unit is fitted with a lifting device to which a chain and shackle may be attached for transport purposes.



The unit should never be raised or lowered by the power cable.



Take note of the weight of the entire unit. The hoist and chain must be adequately dimensioned for that weight and must comply with the current valid safety regulations.

All relevant safety regulations as well as general good technical practice must be complied with.

5.2 Storage

1. During long periods of storage the pump should be protected from moisture and extremes of cold or heat.
2. To prevent the mechanical seals from sticking it is recommended that occasionally the impeller is rotated by hand.
3. If the pump is being taken out of service the oil should be changed before storage.
4. After storage the pump should be inspected for damage, the oil level should be checked, and the impeller checked to ensure it rotates freely.

5.2.1 Moisture protection of motor connection cable

The motor connection cables are protected against the ingress of moisture along the cable by having the ends sealed at the factory with protective covers.

ATTENTION! *The ends of the cables should never be immersed in water as the protective covers only provide protection against water spray or similar (IP44) and are not a water tight seal. The covers should only be removed immediately prior to connecting the pumps electrically.*

During storage or installation, prior to the laying and connection of the power cable, particular attention should be given to the prevention of water damage in locations which could flood.

ATTENTION! *If there is a possibility of water ingress then the cable should be secured so that the end is above the maximum possible flood level. Take care not to damage the cable or its insulation when doing this.*


6 Mounting and installation



The regulations covering the use of pumps in sewage applications together with all regulations involving the use of explosion-proof motors should be observed. The cable ducting to the control panel should be sealed off in a gas-tight manner by the use of a foaming material after the cable and control circuits have been pulled through. In particular the safety regulations covering work in enclosed areas in sewage plants should be observed together with general good technical practice.

For the Piranha transportable version, arrange the cable run so that the cables will not be kinked or nipped. Connect the discharge pipe and cable (see section "Electrical Connection"). Place the pump on a firm surface which will prevent it from overturning or burrowing down. The pump can also be bolted down to the base or suspended slightly by the lifting handle. Hoses, pipes and valves must be sized to suit the pump performance.

6.1 Installation example in concrete sump

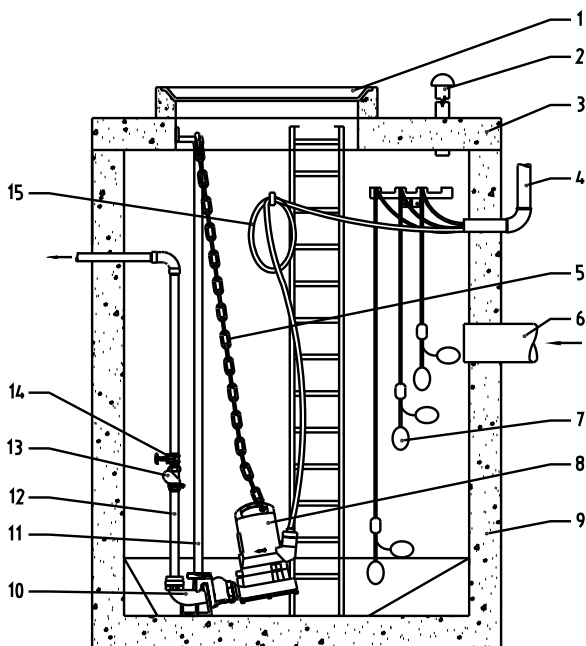

- | | |
|----|--|
| 1 | Sump cover |
| 2 | Venting line |
| 3 | Sump cover |
| 4 | Protective duct to the control panel for cable |
| 5 | Chain |
| 6 | Inflow line |
| 7 | Ball type float switch |
| 8 | Submersible pump |
| 9 | Concrete sump |
| 10 | Pedestal |
| 11 | Guide tube |
| 12 | Discharge line |
| 13 | Non-return valve |
| 14 | Gate valve |
| 15 | Power cable to motor |

1005-00

ATTENTION For those applications subject to Regulation DIN 1986, a backwash loop should be provided in the discharge line.

6.2 Discharge Line

The discharge line must be installed in compliance with the relevant regulations. DIN 1986/100 and EN 12056 applies in particular to the following:

- The discharge line should be fitted with a backwash loop (180° bend) located above the backwash level and should then flow by gravity into the collection line or sewer.
- The discharge line should not be connected to a down pipe.
- No other inflows or discharge lines should be connected to this discharge line.

ATTENTION! The discharge line should be installed so that it is not affected by frost.

The vent line is connected by means of a push-on sleeve to the vertical outlet at the top of the collection tank. It should be of constant cross-section (min. DN 70) and should have a continuous rise to above roof level.

7 Electrical Connection



Before commissioning an expert should check that one of the necessary electrical protective devices is available. Earthing, neutral, earth leakage circuit breakers, etc. must comply with the regulations of the local electricity supply authority and a qualified person should check that these are in perfect order.

ATTENTION! *The power supply system on site must comply with VDE or other local regulations with regard to cross-sectional area and maximum voltage drop. The voltage stated on the nameplate of the pump must correspond to that of the mains*

The power supply cable must be protected by an adequately dimensioned slow-blow fuse corresponding to the rated power of the pump.



The incoming power supply as well as the connection of the pump itself to the terminals on the control panel must comply with the circuit diagram of the control panel as well as the motor connection diagrams and must be carried out by a qualified person.

All relevant safety regulations as well as general good technical practice must be complied with.

ATTENTION! *For use in the open air, the following VDE regulations apply:*

Submersible pumps used outdoors must be fitted with a power cable of at least 10 m length. Other regulations may apply in different countries.

For pumps intended to be used in outdoor fountains, garden ponds and similar places, the pump is to be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.

NOTE: *Please consult your electrician.*

7.1 Temperature monitoring

Thermal sensors in the stator windings protect the motor from overheating.

Piranha motors are fitted with bimetallic thermal sensors in the stator as standard in Piranha-PE and Ex Piranha-S, and as an option in non-Ex Piranha-S.

ATTENTION: *Explosion-proof pumps may only be used in explosive zones with the thermal sensors connected.*

7.2 Seal monitoring

Piranha-PE and Piranha-S pumps are supplied with a moisture sensor (DI), to detect and alert to the ingress of water into the motor and oil chambers.



DI is optional with Piranha-S, and in the Ex-version monitors only the motor chamber.

NOTE! *Running the Piranha-PE pump with the thermal and/or moisture sensors disconnected will invalidate related warranty claims.*



7.3 Wiring diagrams




Single phase:

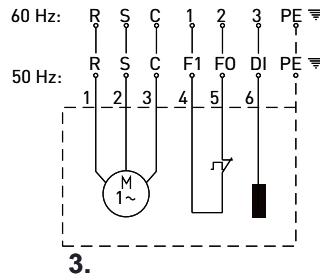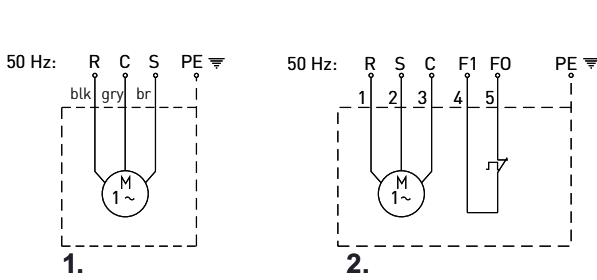

NOTE:

- R = Run
- S = Start
- C = Neutral (Common)
- F1, F0 = Thermal sensor
- DI = Seal monitor
- PE = Earth
- blk = Black
- gry = Grey
- br = Brown

Three phase:

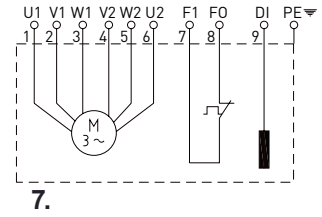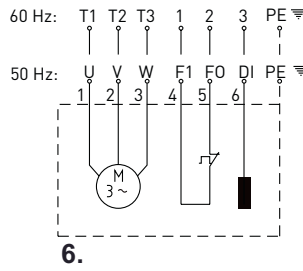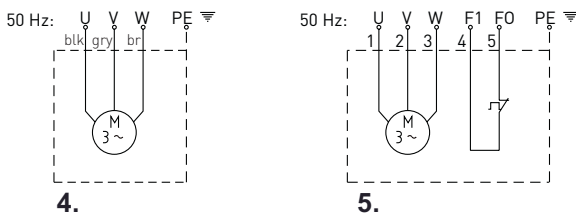

	Single phase			Three phase			
	1.	2.	3.	4.	5.	6.	7.
Piranha 50 Hz	S10/4, S12/2, S17/2	S10/4-Ex, S12/2-Ex, S17/2-Ex	S10/4, S10/4-Ex, S12/2, S12/2-Ex, S17/2, S17/2-Ex	S13/4, S12/2, S17/2, S21/2, S26/2	S13/4-Ex, S12/2-Ex, S17/2-Ex, S21/2-Ex, S26/2-Ex	S13/4, S13/4-Ex, S12/2, S12/2-Ex, S17/2, S17/2-Ex, S21/2, S21/2-Ex, S26/2, S26/2 (DO5)* S26/2-Ex, PE30/2C-Ex	PE55/2E-Ex, PE70/2E-Ex, PE90/2E-Ex, PE110/2E-Ex
Piranha 60 Hz	-	-	S10/4, S10/4-Ex, S20/2, S20/2-Ex, S26/2, S26/2-Ex, PE25/2C-Ex, PE35/2C-Ex, PE45/2C-Ex	-	-	S10/4, S10/4-Ex, S20/2, S20/2-Ex, S30/2, S30/2-Ex, PE28/2C-Ex, PE35/2C-Ex, PE45/2C-EX, PE80/2E-EX PE100/2E-EX, PE110/2E-EX, PE125/2E-EX	-

* 400/695V

ATTENTION: It is important to use the correct capacitors with single phase pumps, use of incorrect capacitors will lead to motor burn-out.

7.4 Checking direction of rotation

When three phase units are being commissioned for the first time and also when used on a new site, the direction of rotation must be carefully checked by a qualified person.



When checking the direction of rotation, the unit should be secured in such a manner that no danger to personnel is caused by the rotating impeller, or by the resulting air flow. Do not place your hand into the hydraulic system!



When checking the direction of rotation, or when starting the unit, pay attention to the **START REACTION**. This can be very powerful and cause the pump to jerk in the opposite direction to the direction of rotation.

ATTENTION:

When viewed from above, the direction of rotation is correct if the impeller rotates in a clockwise manner.



NOTE:

The start reaction is anti-clockwise.

NOTE:

If a number of units are connected to a single control panel then each unit must be individually checked.

ATTENTION!

The mains supply to the control panel should have a clockwise rotation. If the leads are connected in accordance with the circuit diagram and lead designations, the direction of rotation will be correct.

7.5 Changing direction of rotation



The direction of rotation should only be altered by a qualified person.

If the direction of rotation is incorrect then this is altered by changing over two phases of the power supply cable in the control panel. The direction of rotation should then be rechecked

NOTE:

The direction of rotation measuring device monitors the direction of rotation of the mains supply or that of an emergency generator.

8 Commissioning



In explosive zones, care must be taken that during switching on and operation, the pump section is filled with water or alternatively is submerged or under water. Ensure that the minimum submergence given in the data sheet is observed. Other types of operation e.g. snore operation or dry running are not allowed.

Before commissioning the unit should be checked and a functional test carried out. Particular attention should be paid to the following:

- Have the electrical connections been carried out in accordance with regulations?
- Have the thermal sensors been connected?
- Is the seal monitoring device (where fitted) correctly installed?
- Is the motor overload switch correctly set?
- Have the power and control circuit cables been correctly fitted?
- Was the sump cleaned out?
- Have the inflow and outflows of the pump station been cleaned and checked?
- Is the direction of rotation correct - even if run via an emergency generator?
- Are the level controls functioning correctly?
- Are the required gates valves (where fitted) open?
- Do the non-return valves (where fitted) function easily?

9 Maintenance



Before commencing any maintenance work the unit should be completely disconnected from the mains by a qualified person and care should be taken that it cannot be inadvertently switched back on.



When carrying out any repair or maintenance work, the safety regulations covering work in enclosed areas of sewage installations as well as good general technical practices should be followed.

NOTE

The maintenance instructions given here are not designed for “do-it-yourself” repairs as special technical knowledge is required.

9.1 General maintenance hints

ABS submersible pumps are reliable quality products, each being subjected to careful final inspection. Lubricated-for-life ball bearings, together with monitoring devices, ensure optimum pump reliability provided that the pump has been connected and operated in accordance with the operating instructions. However, should a malfunction occur, do not improvise, but ask your ABS Customer Service Department for assistance. This applies particularly if the pump is continually switched off by the current overload in the control panel, by the thermal sensors of the thermo-control system, or by the seal monitoring system (DI).

Regular inspection and care is recommended to ensure a long service life. Service intervals vary for Piranha pumps depending on installation and application. For recommended service interval details contact your local ABS Service Centre. A maintenance contract with our Service Department will guarantee the best technical service.

When carrying out repairs, only original spare parts supplied by the manufacturer should be used.

ABS warranty conditions are only valid provided that any repair work has been carried out in an ABS approved workshop and where original ABS spare parts have been used.

NOTE *Piranha-PE pumps are rated for use in hazardous locations (Ex) as standard and feature a secondary Ex nameplate containing EX data. If a Piranha-PE pump is serviced or repaired in a workshop that is not Ex approved then it must no longer be used in hazardous locations and the Ex nameplate must be removed.*

9.2 Shredding system

The shredding system of the Piranha is a wearing part, and as such may need to be replaced. A reduction in cutting performance can reduce the output. We recommend that the shredding system is inspected regularly. This is particularly so if sewage containing sand is being pumped. Regular inspection and care is recommended to ensure a long service life.

The ABS service organisation would be pleased to advise you on any applications you may have and to assist you in solving your pumping problems.

9.3 Oil filling and oil changing

The motor chamber (Piranha-PE), and the oil chamber between the motor and the hydraulic section (Piranha-PE & Piranha-S), have been filled at manufacture.

An oil change is only necessary:

- at specified service intervals (for details contact your local ABS Service Centre).
- if the DI moisture sensor detects an ingress of water into the oil chamber or motor chamber.
- after repair work that requires draining of the oil.
- if the pump is being taken out of service the oil should be changed before storage.

9.3.1 Instructions on how to drain and fill the oil chamber

1. Loosen the plug screw enough to release any pressure that may have built-up, and re-tighten (for location see pages 5 and 6).



Before doing so, place a cloth over the plug screw to contain any possible spray of oil as the pump de-pressurises.

2. Place the pump in a horizontal position on a waste oil sump with the drain hole underneath.
3. Remove the plug screw and seal ring from the drain hole.
4. After the oil is fully drained rotate the pump so that the drain hole is positioned to the top.
5. Select the required volume from the oil-fill quantities table and slowly fill with oil into the drain hole.
6. Refit the plug screw and seal ring.

9.4 Oil-fill quantities

Piranha	Motor	Oil Chamber (litres)
S	S10/4 - S26/2	0.53
PE	PE30/2-C	0.43
	PE55/2-E - PE125/2-E	0.68

Specification

Piranha-S: white mineral VG15 FP175C

Piranha-PE: white mineral VG8 FP153C

9.5 Bearings and Mechanical Seals

Piranha pumps are fitted with lubricated-for-life ball bearings.

Shaft sealing is by means of double mechanical seals (Piranha-PE), and mechanical seal / lip seal (Piranha-S).

ATTENTION! *Once removed, bearings and seals must not be re-used, and must be replaced in an approved workshop with genuine ABS spare parts.*

9.6 Maintenance of Lifting Stations in accordance with EN 12056.

It is recommended that the lifting station be inspected monthly and its function checked.

In accordance with EN regulations, the lifting station should be maintained by a qualified person at the following intervals:

- in commercial premises - every three months.
- in apartment blocks - every six months.
- in a single family home - once a year.

In addition we recommend that a maintenance contract be taken out with a qualified company.

9.7 Cleaning

If the pump is used for transportable applications, then in order to avoid deposits of dirt and encrustation it should be cleaned after each usage by pumping clear water. In the case of fixed installation, we recommend that the functioning of the automatic level control system be checked regularly. By switching the selection switch (switch setting "HAND") the sump will be emptied. If deposits of dirt are visible on the floats then these should be cleaned. After cleaning, the pump should be rinsed out with clear water and a number of automatic pumping cycles carried out.

9.8 Venting of the volute

After lowering the pump into a sump full of water, an air lock may occur in the volute and cause pumping problems. To clear the air lock, raise the pump in the medium and then lower it again. If necessary, repeat this venting procedure.

10 Troubleshooting Guide

Fault	Cause	Fix
Pump does not run	Moisture sensor shutdown.	Check for loose or damaged oil plug, or locate and replace faulty mechanical seal / damaged o-rings. Change oil. ¹⁾
	Level control override.	Check for float switch that is faulty or tangled and held in OFF position in sump.
	Impeller jammed.	Inspect and remove jammed object. Check gap between impeller and bottom plate and adjust if necessary.
	Gate valve closed, non-return valve blocked.	Open gate valve, clean blockage from non-return valve.
Pump switching on/off intermittently	Temperature sensor shutdown.	Motor will restart automatically when pump cools down. Check thermal relay settings in control panel. Check for impeller blockage. If none of above, a service inspection is required. ¹⁾
Low head or flow	Wrong direction of rotation.	Change rotation by interchanging two phases of the power supply cable.
	Gap too wide between impeller and bottom plate	Reduce gap.
	Gate valve partially open.	Open valve fully.
Excessive noise or vibration	Defective bearing.	Replace bearing. ¹⁾
	Clogged impeller.	Remove and clean hydraulics.
	Wrong direction of rotation.	Change rotation by interchanging two phases of the power supply cable.
High voltage test failure	Water inside motor.	Replace stator. ¹⁾
	Stator insulation damaged.	Replace stator. ¹⁾
	Power cable or lead damaged.	Replace power cable. ¹⁾
Ohms test failure	Stator failure.	Repair/replace stator. ¹⁾



Before commencing any inspection or repair work the pump should be completely disconnected from the mains by a qualified person and care should be taken that it cannot be inadvertently switched back on.

¹⁾Pump must be taken to approved workshop.



EC Declaration of Conformity

Manufacturer: Cardo Production Wexford Ltd
Address: Clonard Road, Wexford, Ireland

Name and address of the person authorised to compile the technical file to the authorities on request:

Frank Ennenbach,
Director Product Safety and Regulations,
Cardo Flow Solutions
Roskildevägen 1,
Box 210,
S-210 22 Malmö,
Sweden.

Declare under our sole responsibility that the products, **ABS Piranha submersible grinder pump S10 - PE125**, to which this declaration relates, are in conformity with the following standards or other normative documents as defined by **Machinery Directive 2006/42/EC, EMC-Directive 2004/108/EC, Low Voltage Directive 2006/95/EC, ATEX 94/9/EC, Construction Products 89/106/EC.**

ABS Piranha submersible grinder pump S10 - PE110:



II 2G k Ex d IIB T4

DIN EN 12050-1, EN 60335, EN 60079-0:2006, EN 60079-1:2007, EN 13463-1:2009, EN 13463-8:2003,
EN ISO 12100-1, EN 809/A1, EN 60034, EN 61000-6, EN ISO 12100-2

ABS Piranha submersible grinder pump S10 - S30:

Motor Type Examination Baseefa03ATEX0716X or Baseefa03ATEX0717X.

Name / address / identification number of Notified Body: Baseefa Ltd / Buxton, UK. / 1180.

20-10-2010

Sean Roche
Cardo Production Wexford Ltd.

SERVICE LOG

Pump Type:

Serial No:

Date

Hours of Operation

Comments


Sign

SERVICE LOG

Date	Hours of Operation	Comments	Sign

SERVICE LOG

Date	Hours of Operation	Comments	Sign

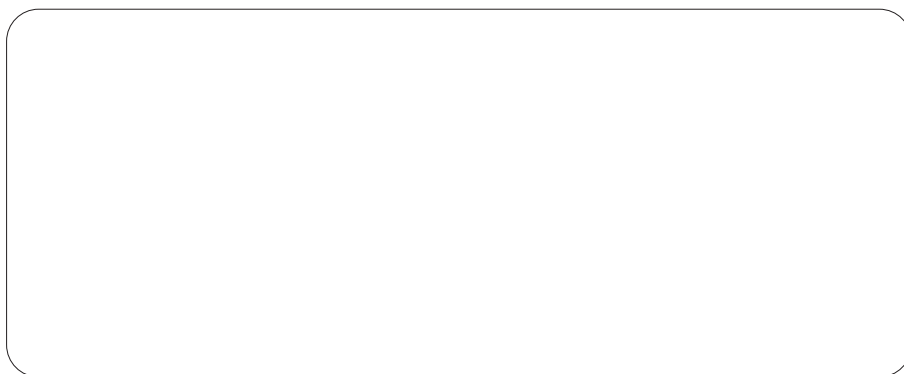

Cardo Production Wexford Ltd., Clonard Road, Wexford, Ireland
Tel. +353 53 91 63 200 Fax +353 53 91 42335. www.cardo.com